

## Quick start

Open blind plug for USB mini connection on the side of actuator.

Put in USB mini cable connector first into actuator, then in computer.

Switch ON 24 VDC power supply to actuator.

Open your OVP 23 program and click CONNECT in program window.

You see GREEN **PAUSE** push button, click that once.

Green **RUN** push button will be visible.

Click yellow **CALIBRATE** push button once. Wait until calibration is ready.

Check also if there is some errors (code visible down in right corner!

If there is some errors, fix the problems that caused them before you go further! You can right mouse click STATUS field on any menu, to see error codes written!

Click green **RUN** push button once. Green **PAUSE** push button will be visible.

If **APPLY** and **SAVE** push buttons will be yellow, click these push buttons.

Do not leave any **yellow** push buttons on any menu window!

Now actuator is calibrated. Before you remove USB connector and close the OVP program, green **PAUSE must be visible**. (Actuator is now connected to signal from your PLC or automation system)

Note: when green **RUN** push button is visible, actuator is in local mode and external control signal don't work!